


## Inserting The Battery

- ▶ Open the battery tray. Place the new battery on the magnet stick as shown.
- ▶ Insert the battery into the tray bottom first, as shown in the diagram, and then tilt the stick up to insert the top of the battery.
- ▶ Finally, remove the battery stick from the new battery, and close the battery tray.

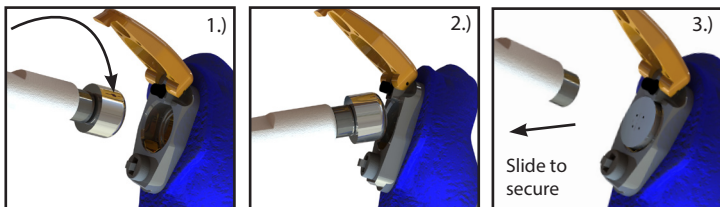


## Removing The Battery

- ▶ Open the battery tray. Place the magnet stick on the battery and remove directly out.

## On/Off (mute)

The on/off button is located at the top of the electronic module.

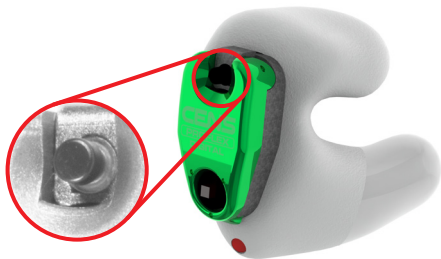

Push and release once to toggle on and off (Mute).

## Functions

The multi-function rocker switch is located at the bottom of the electronic module.



Programs:

1. Game Mode
2. Clay Mode
3. Range Mode
4. Wireless Comms
5. Hunter Mode

Short press up - increases the volume level  
Short press down - decreases the volume level

Long press up - increments program select  
Long press down - decrements program select



### Volume & program auto-save

DX5 will remember your last set volume control level and program setting even when switched off or the battery is removed